

# PETERSON

4200 East 135th Street • Grandview, MO 64030

Tel. 816-765-2000 • Fax 816-761-6693 • www.pmlights.com • pmco@pmlights.com

## RECOMMENDED MOUNTING INSTRUCTIONS


### For Light Series - 752A

**\*\*\*Proper installation of this product is the sole responsibility of the installer\*\*\***

Size of mini-bar: 17.25" wide x 9.5" deep x 2.75" tall

1. Locate a flat surface on vehicle and position light parallel to the ground.
2. In the interior of the vehicle, loosen upholstery at mounting location. For non-roof mounts adapt bolt pattern to surface provided.
3. Use center-punch if available to start five (5) holes. Four (4) holes should be positioned following the mini-bar layout described below. A fifth hole should be punched and drilled for the wire feed. Drill out all five (5) holes with a 1/4" drill.
4. Insert wires through center hole and position mounting bolts in holes.
5. Connect **red wire** to power (+) and **black wire** to ground (-).  
To change the flash pattern touch the **yellow wire** that exits the bottom of the light to positive (+) while the unit is operating. The **yellow wire** may be extended and connected to a momentary switch in the dash for pattern changing after installation.
6. Install washers and hex nuts and tighten down mounting bolts until gasket seals light to the surface of the vehicle.
7. Replace upholstery to original position if applicable.

**DO NOT REMOVE DOME OR DISASSEMBLE UNIT DURING INSTALLATION!!!  
REMOVAL OF DOME WILL VOID WARRANTY**

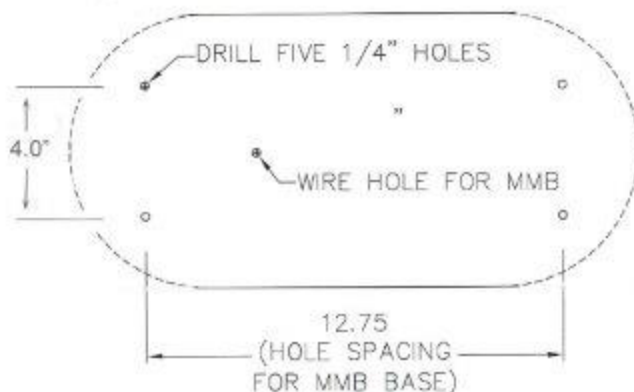

**\*\*\*\*\*CLEAN DOME WITH WATER ONLY\*\*\*\*\***